


MAILBOX INSTRUCTIONS

Reference: Postal Service Form 4056, Feb 1991

1. Whenever possible, boxes must be located so that carrier's vehicle is off pavement when delivering mail.
2. House number must be painted or posted on box in numerals 1" or larger.
3. Post must be neat and of adequate strength and size.
4. Approach to box should be a hard level surface (gravel, stone, cinders).
5. Box must be placed to conform to state laws and highway regulations.

.....

Suggested Installation of a single box

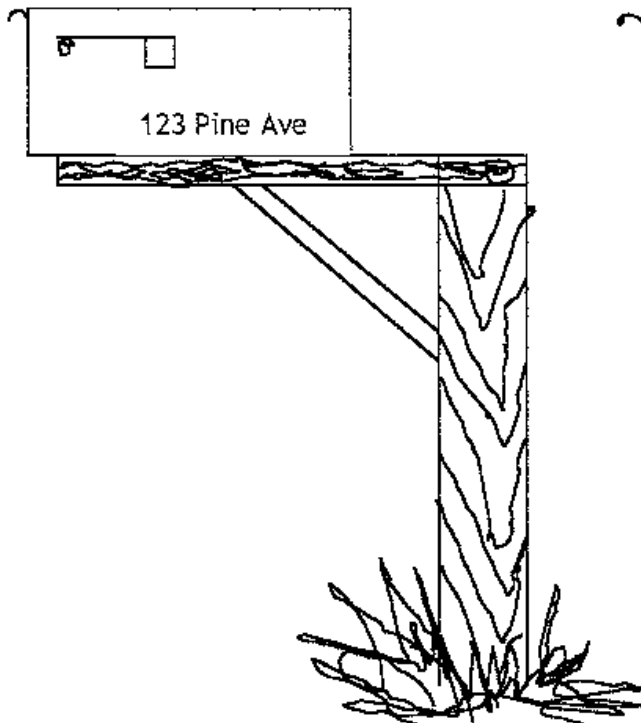

Suggested Installation w/ ditch Or if snow removal is a problem!

